




4-WIRE EARTH RESISTANCE & RESISTIVITY TESTER

- Auto-ranging microprocessor controlled.
- Earth resistivity (ρ) test.
- Earth testing at 20Ω , 200Ω , 2000Ω .
- Earth voltage measuring : $0\sim 300V$ AC.
- Automatic C spike check.
- Automatic P spike check.
- 2-wire test, 3-wire test, 4-wire test.
- 2 Lines $\times$ 16 Characters large LCD.
- Auto power off.
- Data hold.
- Memory save feature (up to 200 measurements)
- Interval between auxiliary earth spikes is $1.0\sim 50.0m$.
- EN 61326-1 CAT IV 300V
IEC 61557-1 IEC 61557-5
EN 61326-1

Earth Resistance measurement ranges:
 $0\sim 20\Omega$, $0\sim 200\Omega$, $0\sim 2000\Omega$



+ Instrument Layout

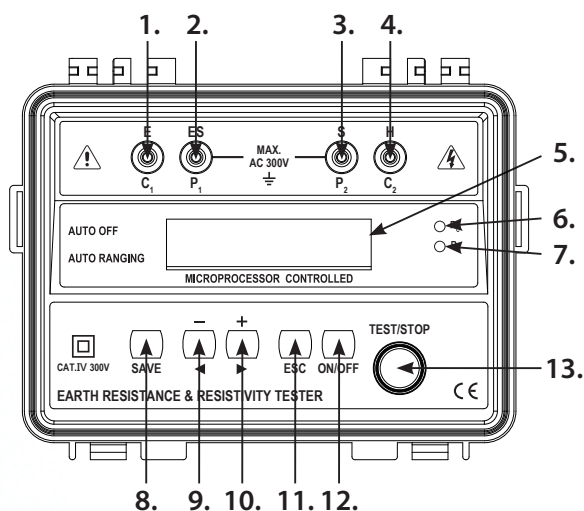

- 1. C1 terminal
- 2. P1 terminal
- 3. P2 terminal
- 4. C2 terminal
- 5. Large LCD
- 6. R_c LED
- 7. R_p LED
- 8. SAVE button
- 9. Cursor button
- 10. Cursor button
- 11. ESC button
- 12. Power button
- 13. TEST/STOP button

4-WIRE EARTH RESISTANCE & RESISTIVITY TESTER



SPECIFICATIONS

Measuring Ranges	Earth Voltage: 0~300.0V AC
	Earth Resistance: 0~20Ω / 0~200Ω / 0~2000Ω
Accuracy	Earth Resistivity: 0.06~6.28 kΩ.m 0.62~62.8 kΩ.m 6.28~628 kΩ.m ($\rho = 2 \times \pi \times L \times R$)
	Earth Resistance: $\pm(2\%rdg+3dgt)$ Earth Voltage: $\pm(2\%rdg+3dgt)$
Earth Resistance Resolution	0~20Ω: 0.01Ω 0~200Ω: 0.1Ω 0~2000Ω: 1Ω
Measurment System	Earth resistance by constant current inverter 820Hz approx. 2mA
Temperature & Humidity	Operating: 0°C~50°C ≤ 80% R.H. Storage: -10°C~60°C ≤ 80% R.H.
Power Source	1.5V (AA) x 8
Dimensions	250(L) x 190(W) x 110(D)mm
Weight	Approx. 1430g (battery included)
Safety Standards	EN 61010-1 CAT IV 300V IEC 61557-1 IEC 61557-5 EN 61326-1
Accessories	Test leads (red-15m, black-10m, yellow-10m green-5m) Auxiliary earth spike x 4 Instruction manual Shoulder belt Carrying case Batteries

+ Accessories



STANDARD ELECTRIC WORKS CO., LTD.

Revillagigedo 28,
Col. Centro Del. Cuauhtémoc
C.P. 06050 México D.F.
Tel. 5512-7166
WhatsApp: (55)76575655
radio@radiosurtidora.com
www.radiosurtidora.com

Model
4235 ER